


INSTRUCTION, BMR-A AUXILIARY CONTROL INSTALLATION KIT

KIT FOR BMR-A GRAVITY DOWN (PARTS SHOWN ON SHEET 1)


KIT FOR BMR-A POWER DOWN (PARTS SHOWN ON SHEET 2)

KIT FOR BMRSD (PARTS SHOWN ON SHEET 3)


KIT FOR BMR-A GRAVITY DOWN P/N 266070-01

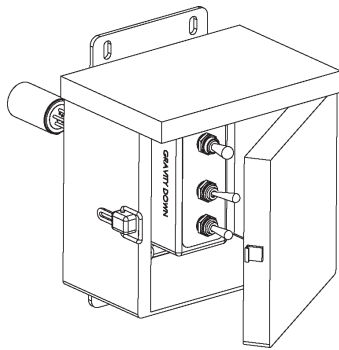


**AUXILIARY CONTROL
BOX ASSY
P/N 266071-01
QTY. 1**

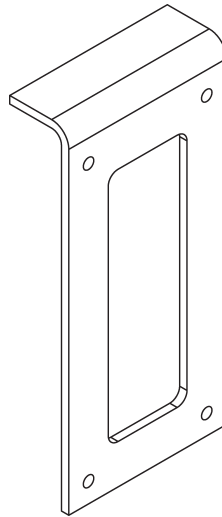

**ANGLE BRACKET,
AUXILIARY CONTROL BOX
P/N 266069-01
QTY. 1**

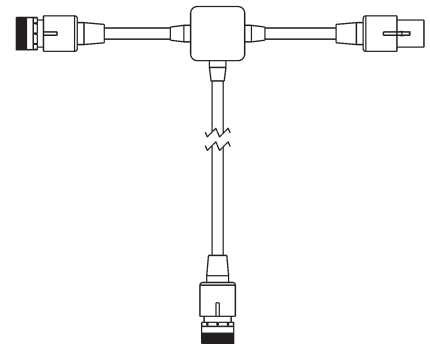

**MOLDED TEE
P/N 282779-01
QTY. 1**

 





**SCREW,
1/4"- 20 x 3/4" LG
P/N 900002-1
QTY. 4**







**FLAT WASHER,
1/2"
P/N 902000-1
QTY. 8**



 **NUT, SELF-LOCKING,
NYLON , 1/4"-20
P/N 901000
QTY. 4**

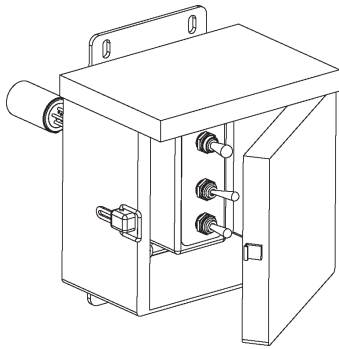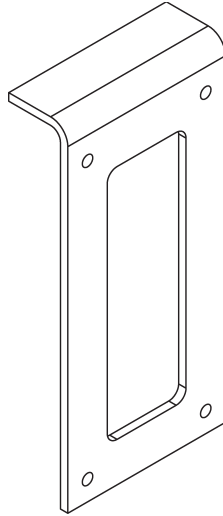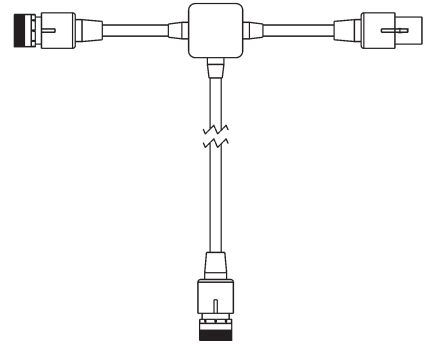 **KIT FOR BMR-A POWER DOWN
P/N 266070-02****AUXILIARY CONTROL
BOX ASSY
P/N 266071-02
QTY. 1****ANGLE BRACKET,
AUXILIARY CONTROL BOX
P/N 266069-01
QTY. 1****MOLDED TEE
P/N 282779-01
QTY. 1****SCREW,
1/4" - 20 x 3/4" LG
P/N 900002-1
QTY. 4****FLAT WASHER,
1/2"
P/N 902000-1
QTY. 8****NUT, SELF-LOCKING,
NYLON , 1/4"-20
P/N 901000
QTY. 4**

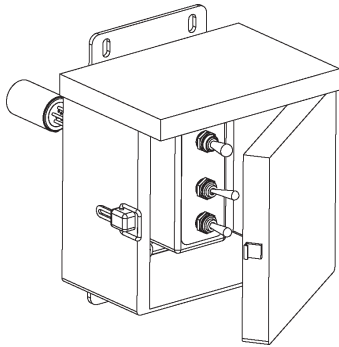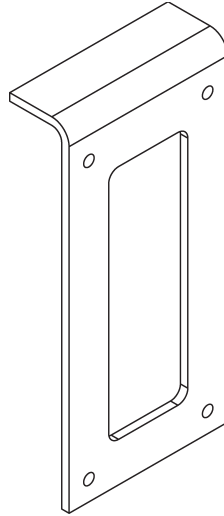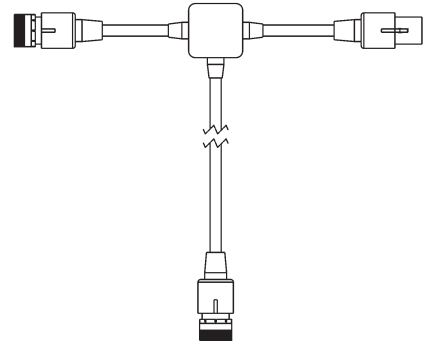**KIT FOR BMRSB
P/N 266070-03****AUXILIARY CONTROL
BOX ASSY
P/N 266071-03
QTY. 1****ANGLE BRACKET,
AUXILIARY CONTROL BOX
P/N 266069-01
QTY. 1****MOLDED TEE
P/N 282779-01
QTY. 1****SCREW,
1/4"- 20 x 3/4"LG
P/N 900002-1
QTY. 4****FLAT WASHER,
1/2"
P/N 902000-1
QTY. 8****NUT, SELF-LOCKING,
NYLON , 1/4"-20
P/N 901000
QTY. 4**

NOTE: Refer to **Operation Manual** for instructions to operate Liftgate.

1. **UNFOLD** and **LOWER** platform to the ground (**FIG. 4-1**).

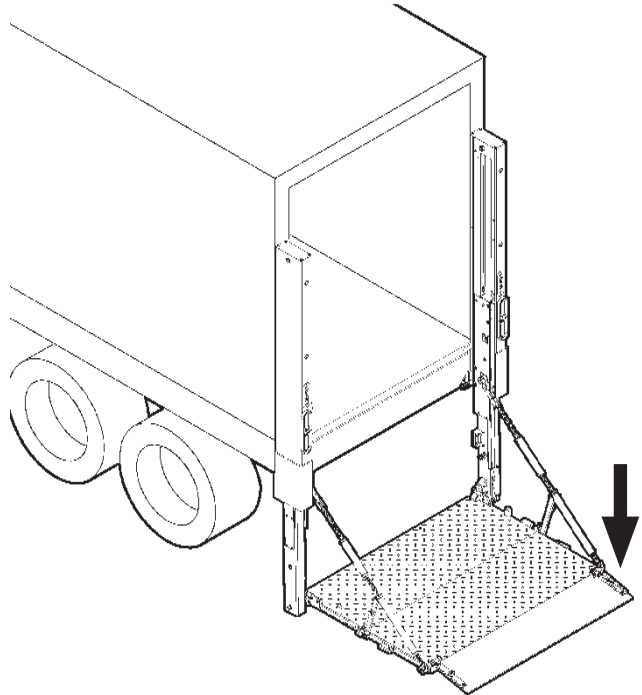


FIG. 4-1

2. Rotate master disconnect switch counter-clockwise to shut off power to pump box (**FIG. 4-2**).

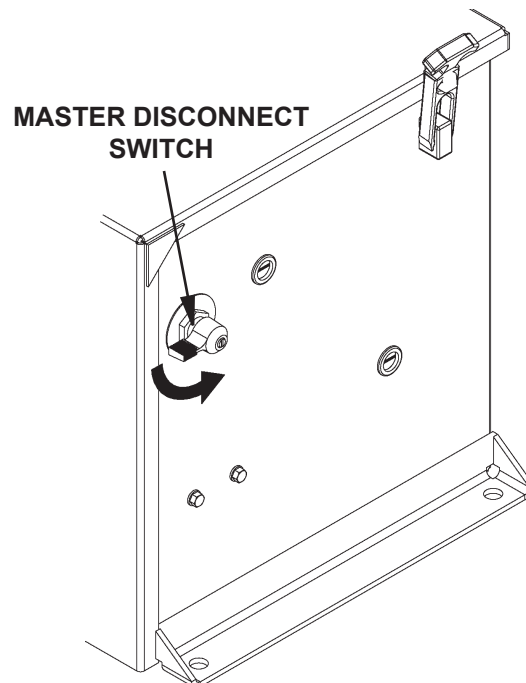


FIG. 4-2

2. Weld angle bracket (Kit item) to cross member under vehicle body as shown in **FIG. 5-1**.

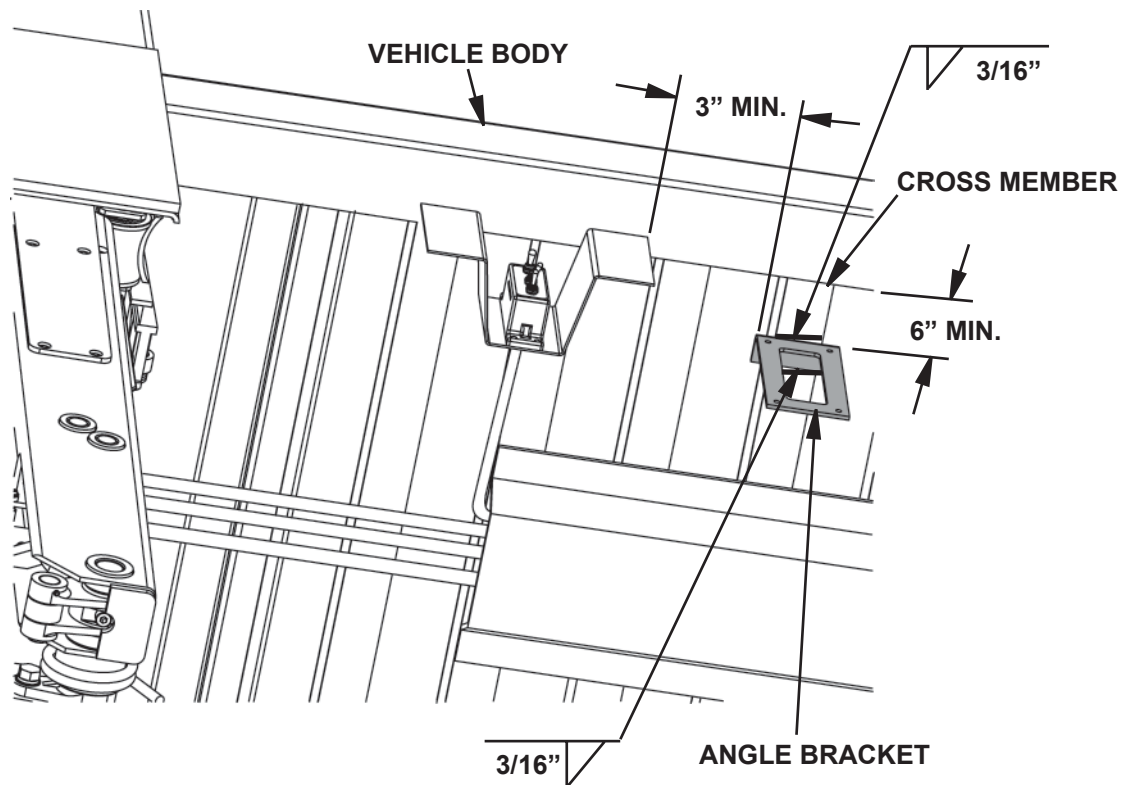


FIG. 5-1

3. Attach auxiliary control box (Kit item) to angle bracket with (4) 1/4"-20 screws, (8) 1/2" flat washers, and (4) 1/4"-20 lock nuts (Kit items) as shown in **FIG. 5-2**.

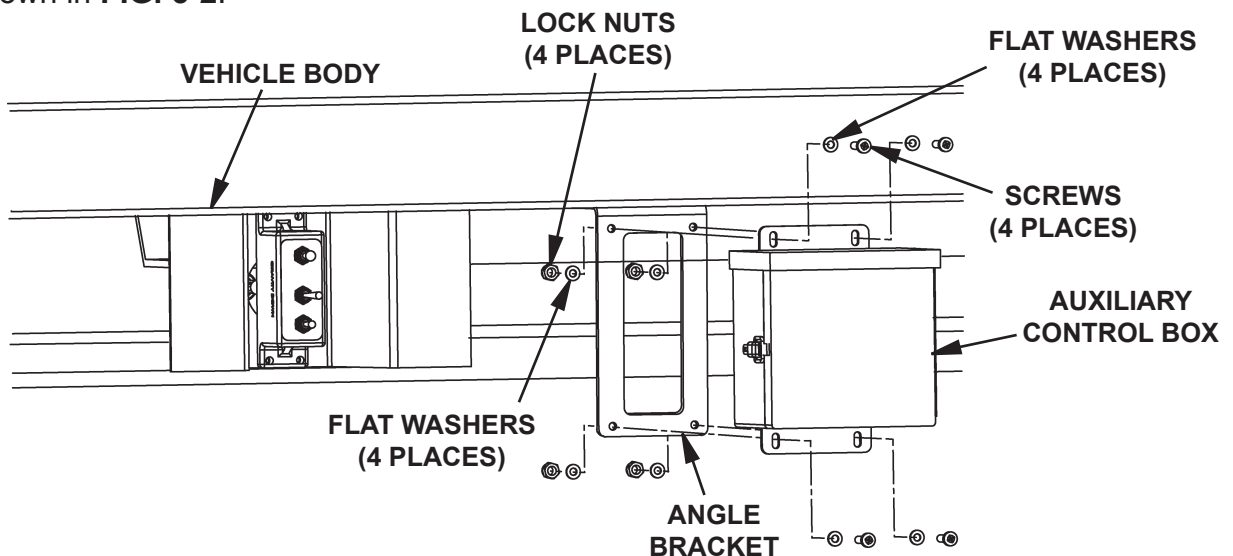


FIG. 5-2

4. Disconnect interconnect wiring harness from existing control switch (**FIG. 6-1**). Connect molded tee (Kit item) to interconnect wiring harness, auxiliary control box, and existing control switch as shown in **FIG. 6-1**.

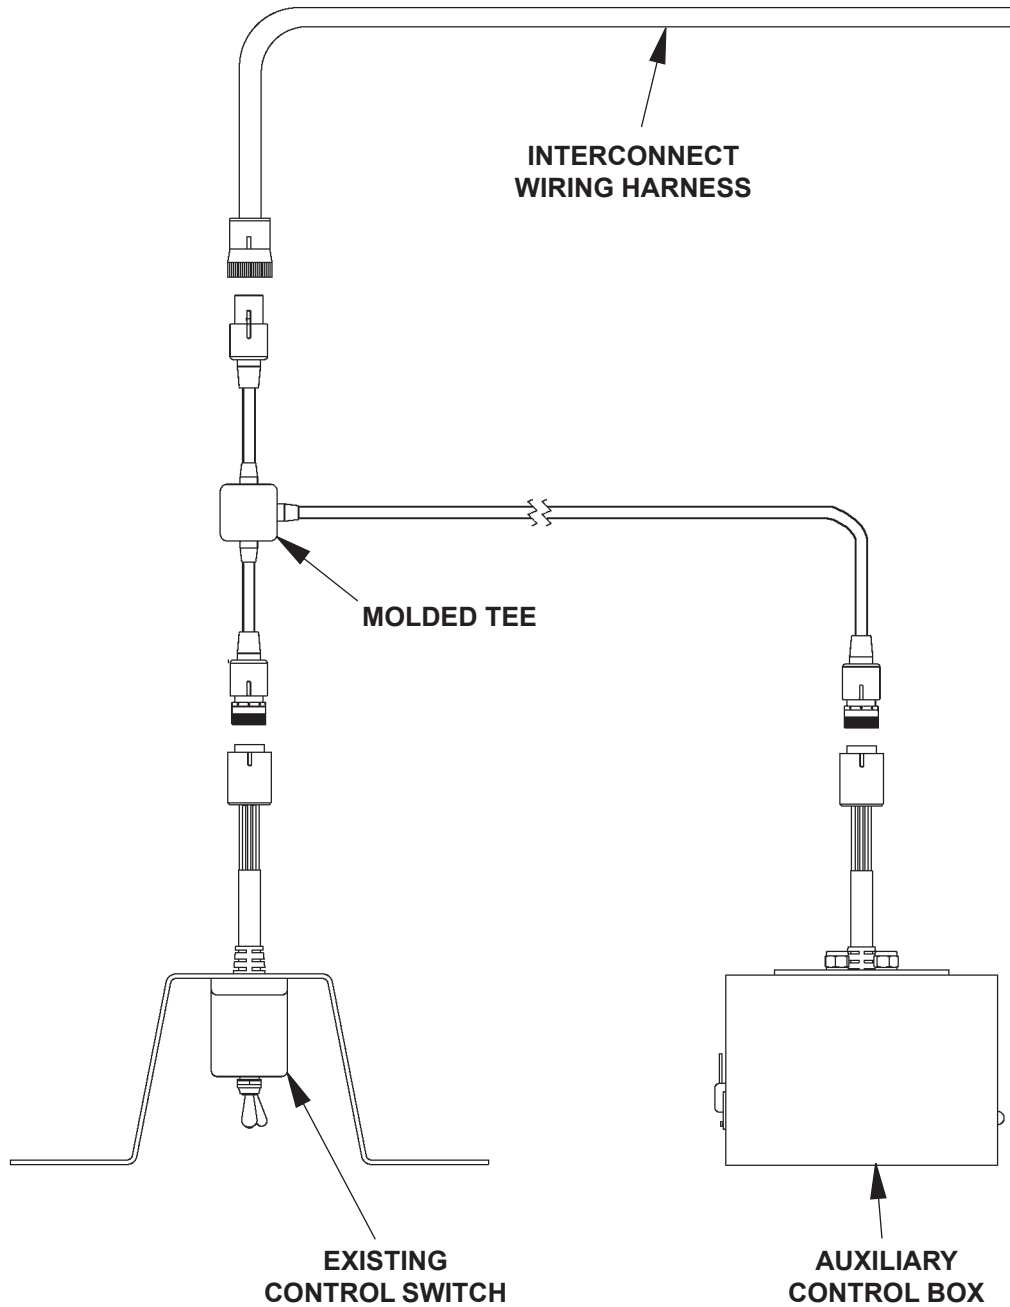


FIG. 6-1

5. Rotate master disconnect switch clockwise (**FIG. 7-1**) to turn on power to pump box.

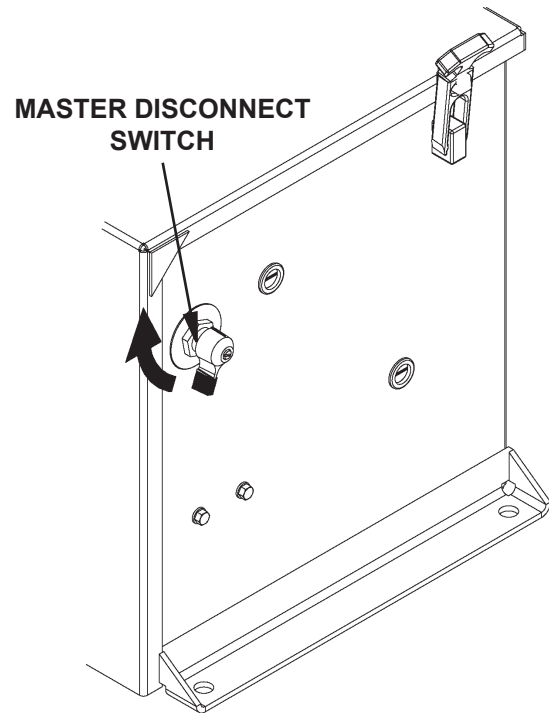


FIG. 7-1

NOTE: Refer to **Operation Manual** for instructions to operate Liftgate.

6. To verify correct operation, use the switches in the auxiliary control box to raise (**UP**), lower (**DOWN**), **FOLD** and **UNFOLD** (**FIG. 7-2**) Liftgate.

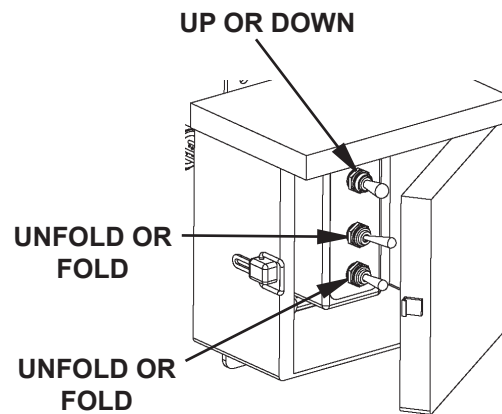


FIG. 7-2