


INSTRUCTION, GPSLR CYCLE COUNTER KIT

KIT P/N 268466-01 (12 VOLT)

KIT P/N 268466-02 (24 VOLT)

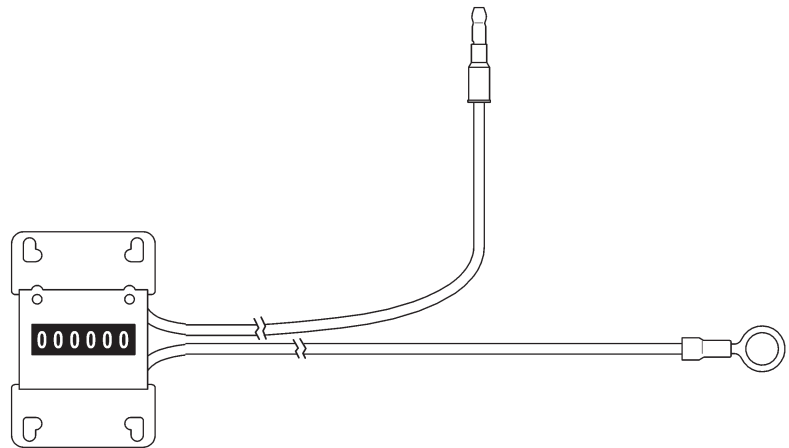


CYCLE COUNTER
QTY. 1

⚠ WARNING

To prevent personal injury & equipment damage, avoid working under the platform while platform is raised off the ground.

NOTE: Refer to Operation Manual for complete operating instructions.

1. Move the platform all the way out and lower it to the ground (**FIG. 1-1**). Then unfold the flipover.

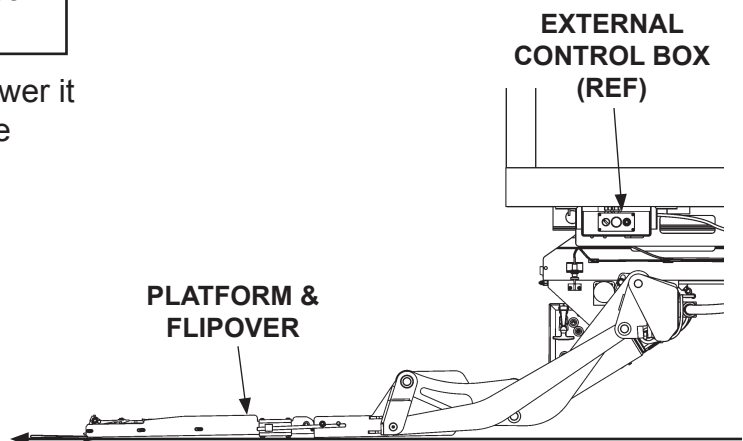


PLATFORM & FLIPOVER UNFOLDED
ON THE GROUND (RH SIDE VIEW)

FIG. 1-1

⚠ WARNING


To prevent personal injury & equipment damage, disconnect battery power from Liftgate while installing electrical components.

2. Disconnect power from Liftgate as shown in FIG. 2-1.

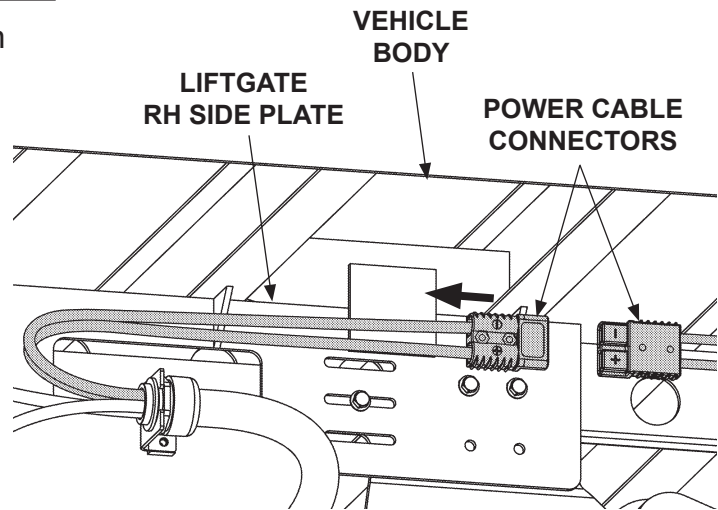


**DISCONNECTING POWER FROM LIFTGATE
(RH SIDE VIEW)
FIG. 2-1**

3. Unlatch and remove the pump box cover (FIG. 2-2).

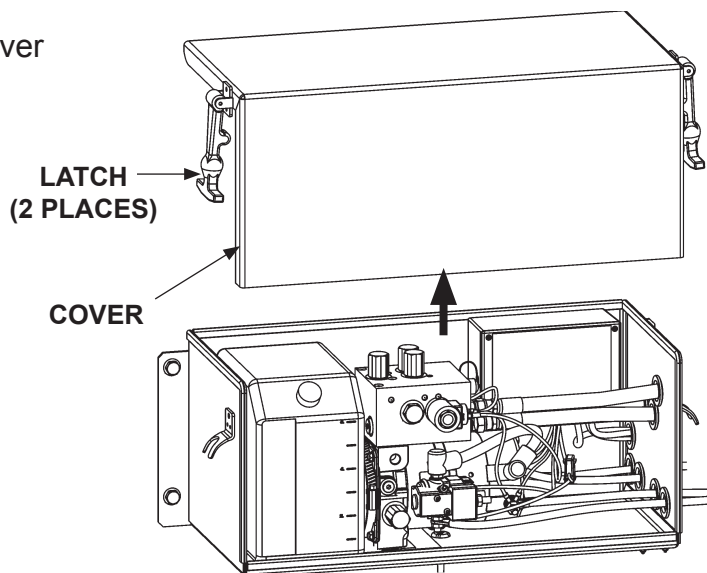


**PUMP BOX WITH COVER REMOVED
FIG. 2-2**

4. Remove the #4-40 screws and lock nuts from pump box (**FIG. 3-1**).

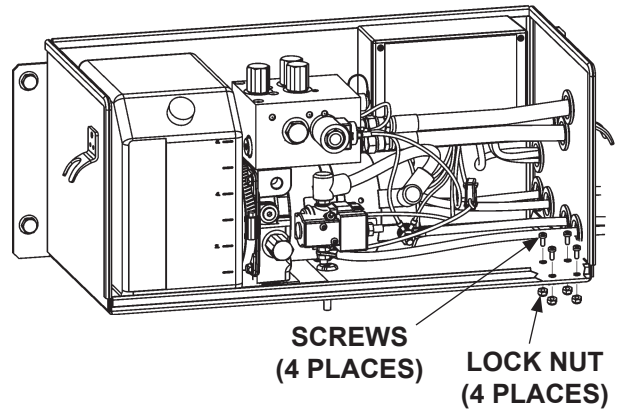


**REMOVING CYCLE COUNTER
ATTACHING SCREWS
FIG. 3-1**

5. Bolt cycle counter (Kit item) to pump box with screws and lock nuts removed in the previous step (**FIG. 3-2**).

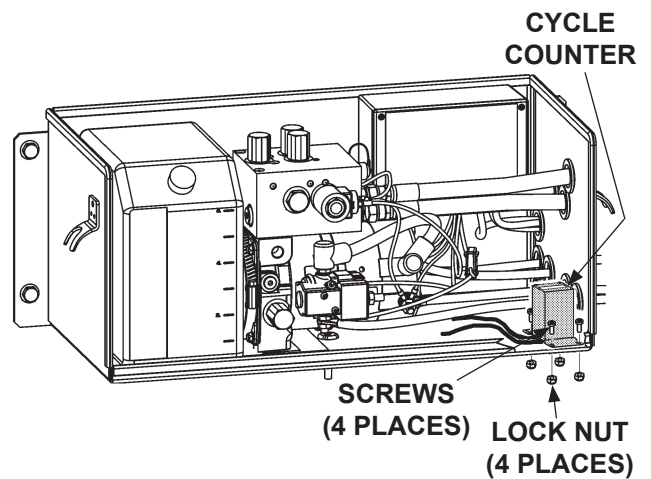


**BOLTING CYCLE COUNTER
TO PUMP BOX
FIG. 3-2**

6. Connect cycle counter wiring as follows. Remove hex nut from (-) stud on the motor. Connect black wire (-) from cycle counter to (-) stud on the motor. Reinstall hex nut securely. Then connect red wire (+) from cycle counter to violet wire (+) on the controller (**FIG. 4-1**).

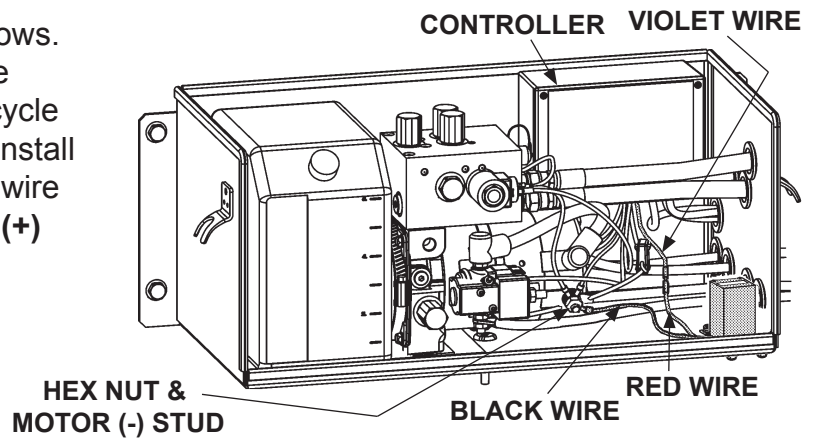


CYCLE COUNTER WIRES CONNECTED TO MOTOR AND CONTROLLER
FIG. 4-1

7. Reconnect power to Liftgate as shown in **FIG. 4-2**.


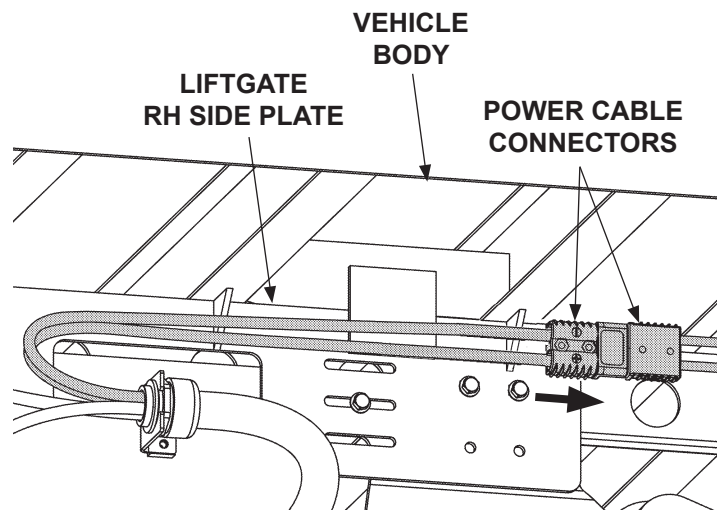


DISCONNECTING POWER FROM LIFTGATE (RH SIDE VIEW)
FIG. 4-2

8. Raise platform to bed level (FIG. 5-1).
Cycle counter should count 1 cycle.

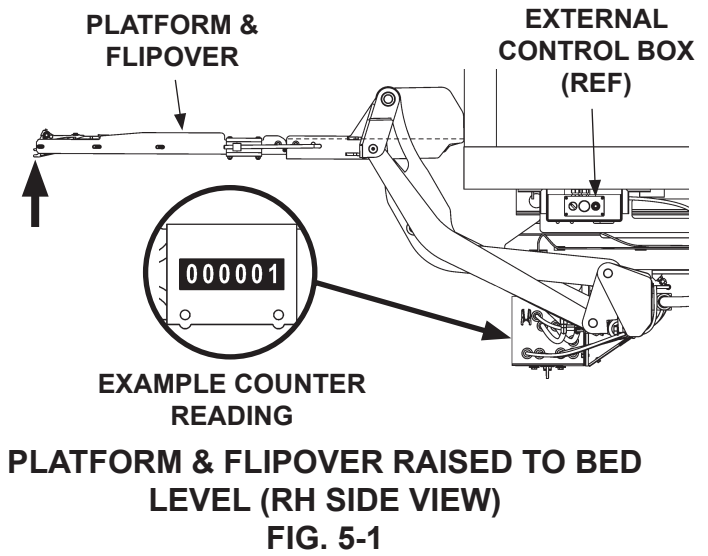


9. Lower platform to ground level (FIG. 5-2).
Then, raise platform to bed level (FIG. 5-3).
Cycle counter should count 1 more cycle.

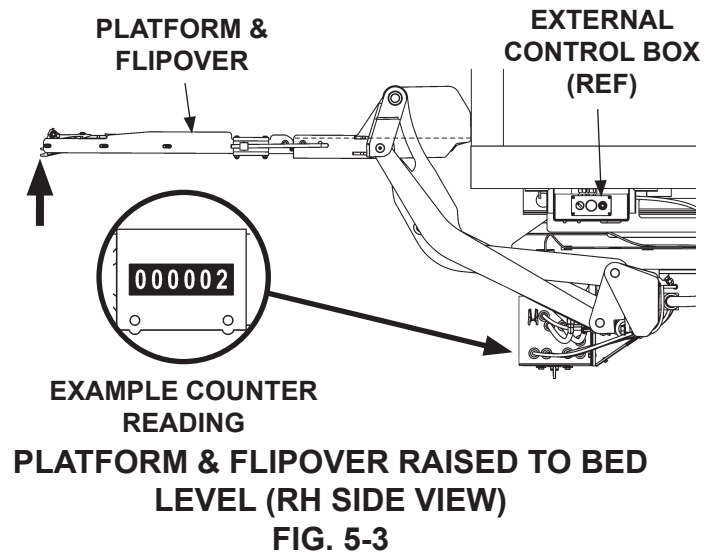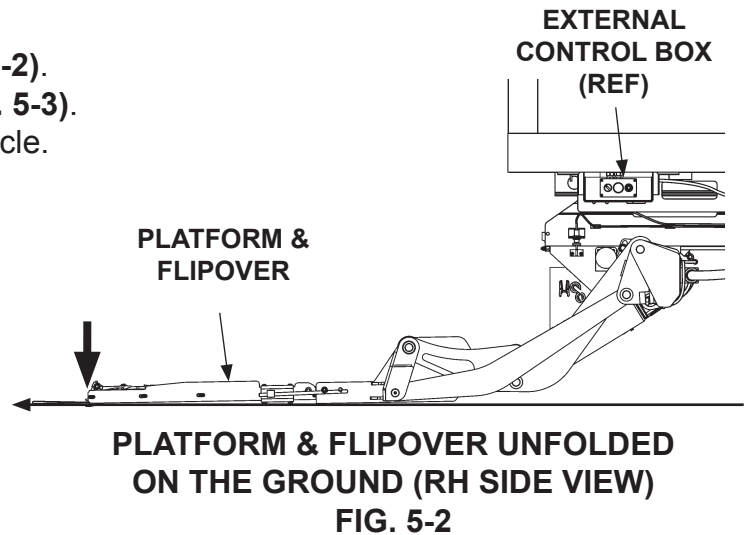

10. Lower platform to ground level (FIG. 5-2).

11. Reinstall pump box cover (**FIG. 6-1**).
Latch cover securely.

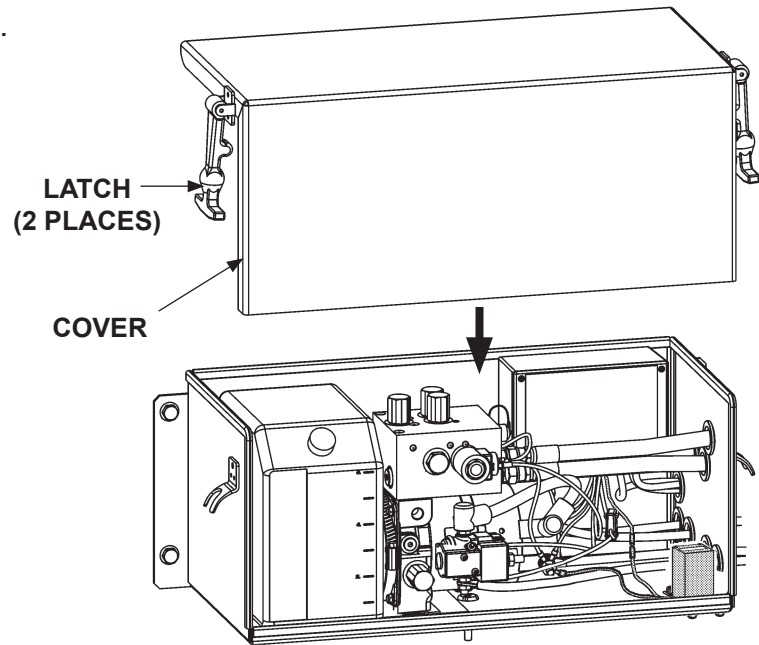

**REINSTALLING PUMP BOX COVER
FIG. 6-1**

12. Liftgate is ready to operate.