
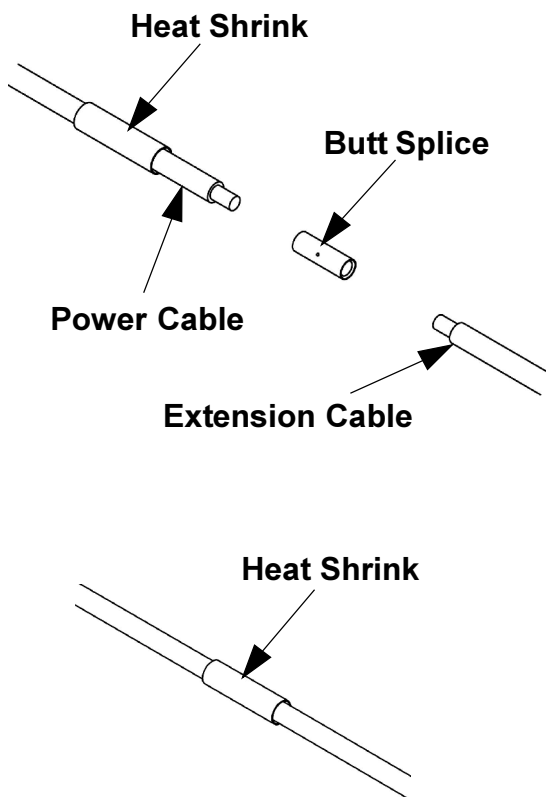


## KIT, EXTENSION CABLE ASSEMBLY INSTALLATION INSTRUCTION P/N 264849

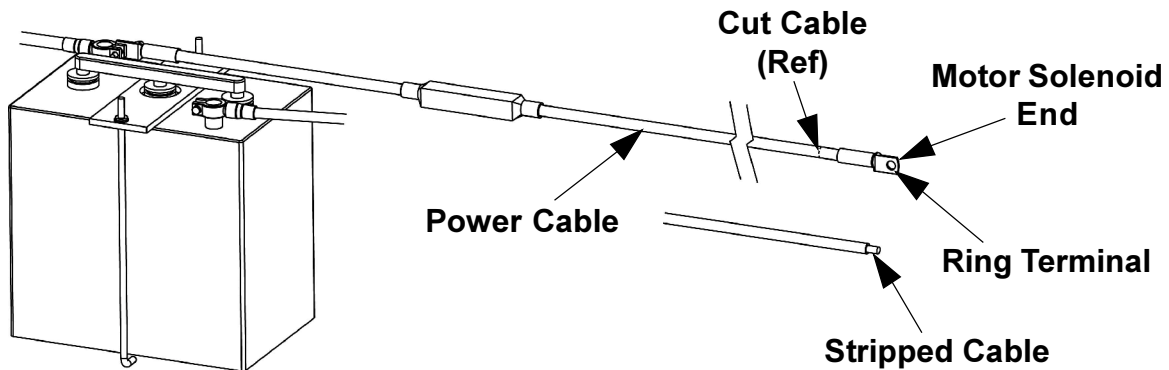

1. Remove negative battery cable from battery. Remove positive battery cable from battery.
2. Cutoff Ring Terminal from Motor Solenoid End and strip cable.
3. Cut supplied Extension Cable to desired length from the end without a Ring Terminal. Strip Cable End.
4. Slide Heat Shink on Power Cable and leave to the side. Insert stripped ends of Power Cable and Extension Cable into Butt Splice. Crimp both ends of Butt Splice. For proper crimping technique refer to Power Cable Information Sheet (DSG# M-00-04).
5. Clean off both ends of cable. Slide Heat Shrink over crimped Butt Splice Connection. Make sure shrinkwrap is overlapping Butt Splice on both ends a minimum of 1/2". Heat shrinkwrap.
6. Connect Ring Terminal on Extension Cable to Motor Solenoid.
7. Install positive battery cable to battery. Install negative battery cable to battery.
8. Note: Always be certain that battery cable is properly routed and secured (See Installation Manual).