## **MAXON**<sup>®</sup>

# INSTRUCTION, ALUMINUM PLATFORM HINGE LUBE KIT P/N 267540-01



#### **MULTI-USE LUBRICANT SPRAY** P/N 908074-01 QTY. 1


**NOTE:** These instructions contain two procedures for cleaning and lubricating the hinge between an Aluminum Platform and Flipover. One procedure is for TUK-A-WAY and MM-1300 Liftgates equipped with Aluminum Platform and Flipover. The second procedure is for BMR-A Liftgates equipped with Aluminum Platform and Flipover. Do the procedure that applies to your Liftgate.

NOTE: For best results, steam clean or pressure wash the hinge between Aluminum Platform and Flipover before applying the spray lubricant. After the first cleaning and lubrication, only periodic lubrication is usually needed to maintain the effectiveness of the lubricant.

**NOTE:** For detailed operating instructions, refer to the Operation Manual provided with your Liftgate.


#### TUK-A-WAY & MM1300 Liftgates

1. Lower the Liftgate to the ground (FIG. 1-1).

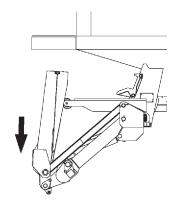


LOWERING LIFTGATE (GPT SHOWN) FIG. 1-1

2. Unfold the Platform (FIG. 2-1).

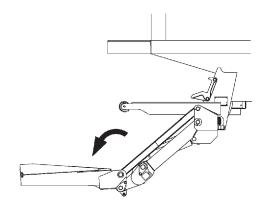


UNFOLDING PLATFORM (GPT SHOWN) FIG. 2-1

3. Pressure wash or steam clean the hinge area between Platform and Flipover, across the entire width of Platform (FIGS. 2-2A & 2-2B).

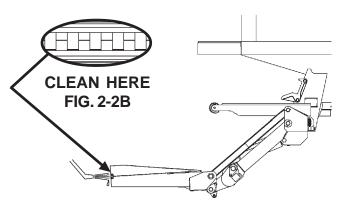


PLATFORM UNFOLDED (GPT SHOWN) FIG. 2-2A

4. Unfold the Flipover (FIG. 3-1).

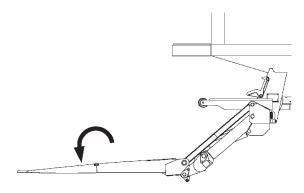

**UNFOLDING FLIPOVER (GPT SHOWN)** FIG. 3-1


5. Pressure wash or steam clean the hinge between Platform and Flipover, across the entire width of Platform (FIGS. 3-2A & 3-2B).

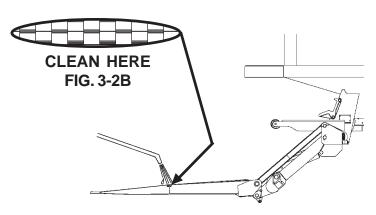

6. Dry up water from around the hinge (FIGS. 3-2A & 3-2B).


FLIPOVER UNFOLDED (GPT SHOWN) FIG. 3-2A

7. Using the tube attachment supplied with the lubricant, spray the lubricant into the hinge, across the entire width of Platform (FIGS. 4-1A & 4-1B).

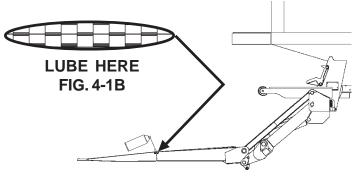


FLIPOVER UNFOLDED (GPT SHOWN) FIG. 4-1A

8. Fold and unfold the Flipover several times to work lubricant into the hinge (FIGS. 4-2 & 5-1). If the hinge is not working smoothly, repeat steps 3 through 7.

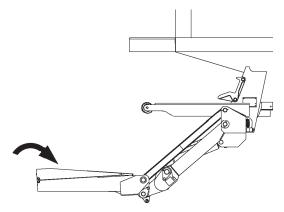


**FOLDING FLIPOVER (GPT SHOWN)** FIG. 4-2

9. Unfold the Flipover (FIG. 5-1).

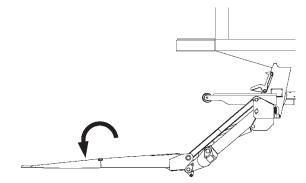


UNFOLDING FLIPOVER (GPT SHOWN) FIG. 5-1

**10.** Wipe off lubricant over-spray from the top of Platform and Flipover **(FIG. 5-2)** with a clean, lint-free cloth.

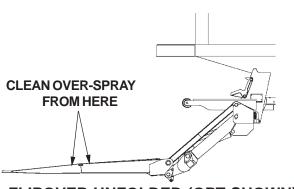


FLIPOVER UNFOLDED (GPT SHOWN) FIG. 5-2

11. Fold the Flipover (FIG. 5-3).

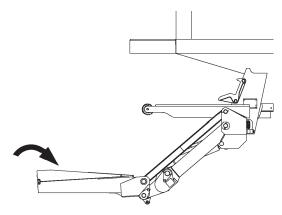


FOLDING FLIPOVER (GPT SHOWN) FIG. 5-3

12. Fold the Platform (FIG. 6-1).

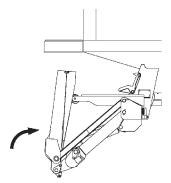

FOLDING PLATFORM (GPT SHOWN) FIG. 6-1

13. Stow the Liftgate (FIG. 6-2).

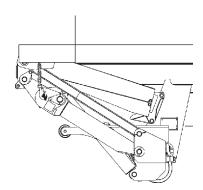


LIFTGATE STOWED (GPT SHOWN) FIG. 6-2



#### **BMR-A Liftgates**

1. Unfold the Platform partially to expose Platform and Flipover hinge, and lower it to the position shown in **FIG. 7-1A**.

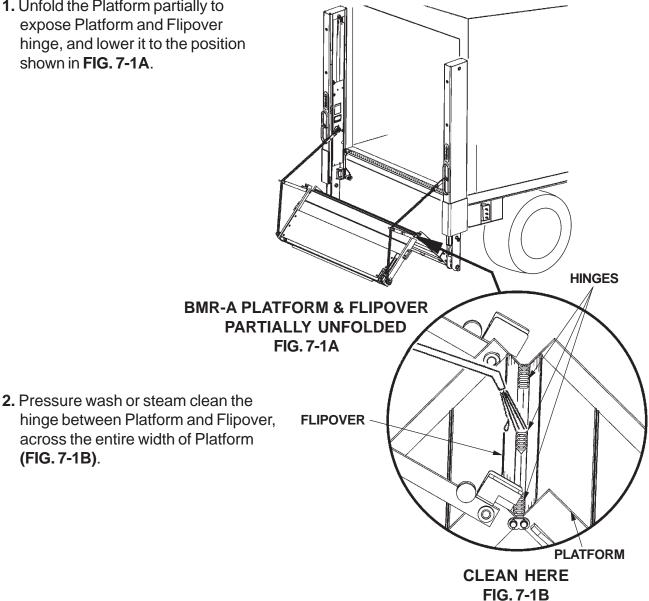

3. Dry up water from the hinge (FIG. 7-1B).

(FIG. 7-1B).



#### **BMR-A Liftgates**


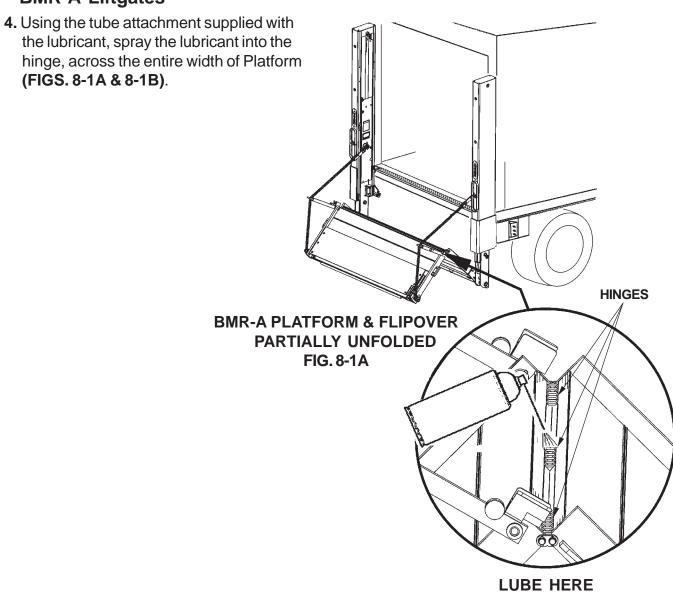


FIG. 8-1B



#### **BMR-A Liftgates**

5. Raise and fold Platform (FIG. 9-1). Then unfold Platform (FIG. 9-2). Repeat this step several times to work Lubricant into the hinge. If the hinge is not working smoothly, repeat steps 1 through 4.

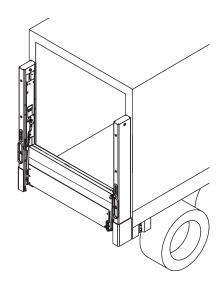

**BMR-A PLATFORM & FLIPOVER FOLDED** FIG. 9-1

6. Wipe off lubricant over-spray from the top of Platform and Flipover (FIG. 9-2) with a clean, lint-free cloth. **CLEAN OVER-SPRAY** FROM HERE

**BMR-A PLATFORM & FLIPOVER UNFOLDED** FIG. 9-2

7. Stow the Platform (FIG. 9-1).