

## INSTRUCTION, BMRA COUPLING BOLT FIELD KIT

KIT P/N 285280-01

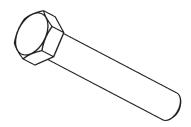

HEX BOLT PIN, 3/4"-10 X 4-1/2" LG. P/N 900032-7 QTY. 1

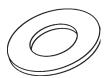

FLAT WASHER, 3/4", .090" THICK P/N 902000-20 QTY. 1



FLANGE LOCK NUT, 3/4"-10 P/N 901023-05 QTY. 1 **NOTE:** Refer to **Operation Manual** for instructions to operate Liftgate.

1. Use control box to lower the platform (DOWN) to approximately 12" above the ground. Support platform with 2 jack stands (FIG. 2-1). Make sure ramp edge is 4" higher than inboard edge of platform.

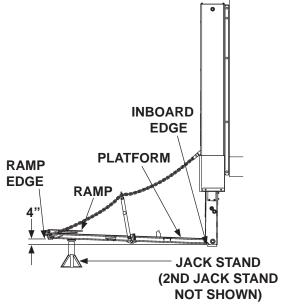


FIG. 2-1

2. Unbolt pin collar from RH runner to remove chain arm (FIG. 2-2). Then, unbolt and remove cover from runner. Repeat for LH chain arm and LH runner.


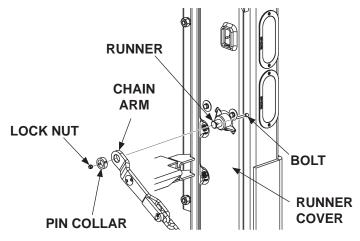


FIG. 2-2

# LIFT CORPORATION Sht. 3 of 8 DSG# M-13-04 Rev. - Date: 05/28/13

3. Raise the platform (UP) slightly and place 2 more jack stands near the inboard edge (FIG. 3-1).

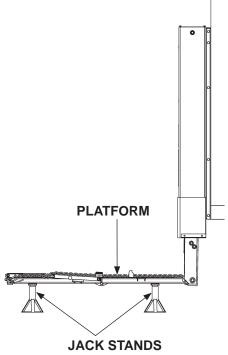

(3RD & 4TH STANDS NOT SHOWN)

FIG. 3-1


4. Unbolt pin from platform connector bar and inner coupling at the RH runner (FIG. 3-2). Then, remove pin. SOCKET HEAD **SCREW LOCK NUT** PIN OUTSIDE COUPLING INSIDE **HEX NUT COUPLING 5.** Unbolt outside coupling from **SOCKET HEAD SCREW** platform connector bar on RH **LOCK** side of platform (FIG. 3-2). WASHER **COUPLING BOLT** Discard bolt. **BOLTS** RETAINER (2 PLACES)

**BRACKET** 

FIG. 3-2

**FLAT WASHER** (2 PLACES)


**6.** Unbolt pin from platform connector bar, LH coupling, and pin collar on the LH runner (**FIG. 4-1**). Then, remove pin.

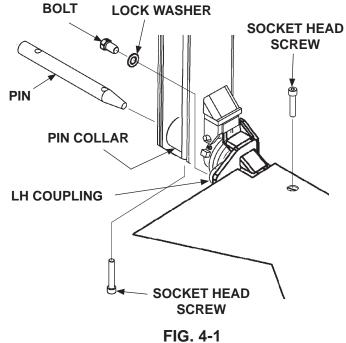

7. Unbolt LH coupling from platform connector bar on LH side of platform (FIG. 4-1). Save bolt to reinstall.

# LIFT CORPORATION Sht. 5 of 8 DSG# M-13-04 Rev. - Date: 05/28/13


8. Use a forklift or equivalent lifting device to move the platform approximately 6" towards the front of the vehicle to clear the platform away from the attaching points on the runners (FIG. 5-1). When platform is clear of the runners, raise the runners (UP) a few inches. Then, lower platform down on the supports.

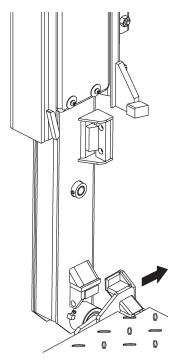

9. Using the RH platform connector bracket hole for the new coupling bolt.

as a template (FIG. 5-2A) mark center of MOVING PLATFORM CLEAR OF RUNNERS FIG. 5-1

FIG. 5-2B

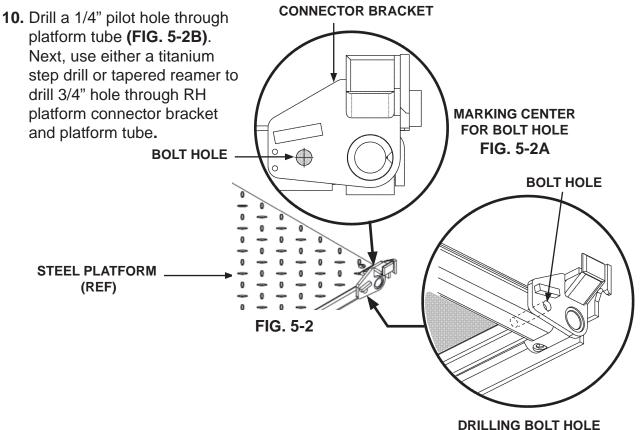

## **MAXON** LIFT CORPORATION Sht. 6 of 8 DSG# M-13-04 Rev. - Date: 05/28/13

**11.** Use a forklift or equivalent lifting device to lift platform and line it up with attaching points on the LH runner (**FIG. 6-1**) and RH runner.



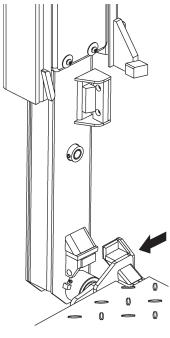


FIG. 6-1

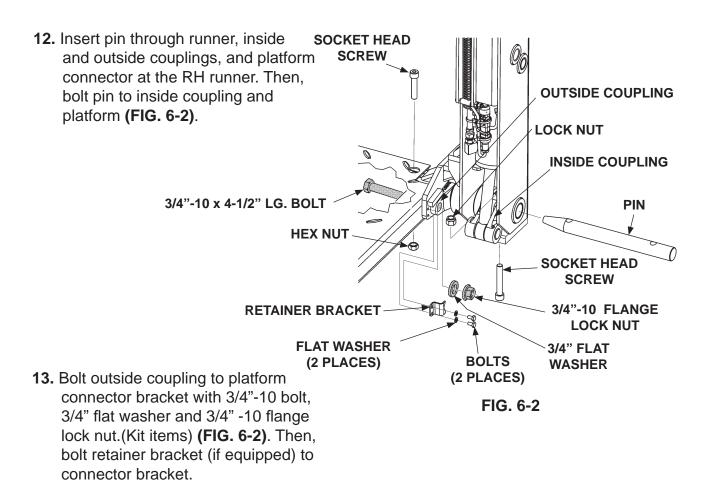

#### **MAXON** LIFT CORPORATION Sht. 7 of 8 DSG# M-13-04 Rev. - Date: 05/28/13

**14.** Bolt LH coupling to LH platform connector bracket (**FIG. 7-1**).

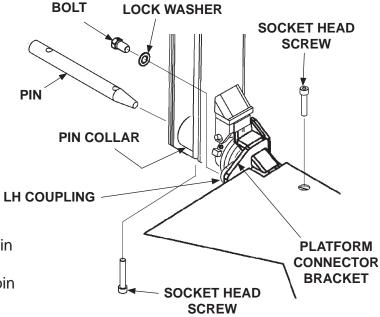

**15.** Insert pin through LH coupling, pin collar and platform at LH runner **(FIG. 7-1)**. Then, bolt pin to LH pin collar and platform **(FIG. 7-1)**.

FIG. 7-1

- **16.** Use control box to raise the platform **(UP)** slightly and remove 2 jack stands near the inboard edge **(FIG. 7-2)**.
- **17.** Use control box to lower **(DOWN)** platform on jack stands **(FIG. 7-2)** so inboard edge is 4" below ramp edge.

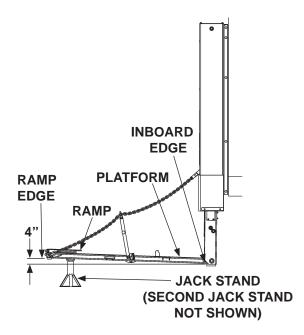


FIG. 7-2

**18.** Reattach chain arm to RH runner. Then, bolt on the pin collar to secure chain arm **(FIG. 8-1)**. Repeat for LH runner.

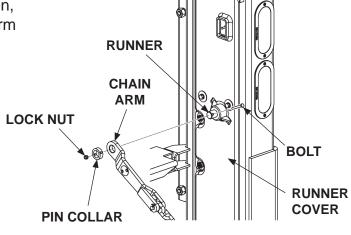


FIG. 8-1